



© 2021 Philips Domestic Appliances Holding B.V.
All rights reserved.
3000 070 4252.3 (20/07/2021)

RU: Блендер
NK: Блендер
HR2041 (200-240V, 50-60Hz, 450W)

Импортер на територијата на Република Северна Македонија:
ООО "Гениум дин дом Еуропа", Република Северна Македонија,
123022, Македа ул., Среќа Павлова б.к. 13, 5. етаж,
Ул.Бр. 31, Београд, Контакт: 7 495 961-1111
Изогласање:
"ДАП Б.В.", Туссенланден 4 а, 9206АА, Дарктен, Нидерланды
Див ботвонх нонда
Сделаво в Китае
Пробно класа II

Ресор имен Кедрин одна територијата на импортирање:
"Тоника дин дом Еуропа", ЖИСК, Ресор Федерација,
123022, Македа ул., Среќа Павлова б.к. 13, 5. етаж,
Ул.Бр. 31, Београд, Контакт: 7 495 961-1111
Омилури:
"ДАП Б.В.", Туссенланден 4 а, 9206АА, Дарктен, Нидерланды
Трговски кривителите се арманч:
"Катајска каска II"

	Услови хранения/Сактау/Услови експлуатација/Услови користања	Услови експлуатација/Услови користања
Температура/Температура	20°C ~ +40°C	+10°C ~ +40°C
Оптимална влажност/влажност/влажност	20% ~ 95%	20% ~ 90%
Атмосферско давление/Атмосферско давление	98 ~ 102 kPa	98 ~ 102 kPa

English

Introduction

Congratulations on your purchase and welcome to Philips!
To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Important

Read this important information carefully before you use the appliance and save it for future reference.

Warnings

- Never immerse the motor unit in water or any other liquid, nor rinse it under the tap. Use only a moist cloth to clean the motor unit.
- Warning
- Thoroughly clean the parts that come into contact with food before you assemble the mill/chopper onto the motor unit.
- Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
- If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
- Do not use the appliance if the plug, the mains cord or other parts are damaged.
- Never use the blender jar or accessories to switch the appliance on and off.
- Never let the appliance run unattended.
- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe manner and if they understand the hazards involved.
- Children shall not play with the appliance.
- Do not touch the blades, especially when the appliance is plugged in. The blades are very sharp.
- Do not pour hot liquids into the food processor or blender as it can be ejected out of the appliance due to a pressure steaming.
- The appliance is intended to be used in household only.

Electromagnetic fields (EMF)

This Philips appliance complies with all standards regarding electromagnetic fields (EMF).



