



Please read all instructions carefully to familiarise yourself with your new travel hairdryer before using.

Save these instructions for further reference.

For any further assistance or information call Customer Services on
T: 01227 740066
or visit
W: www.wahl.co.uk
E: customer.services@wahl.co.uk

CONTENTS

IMPORTANT SAFEGUARDS	Page 3
OPERATING INSTRUCTIONS	Page 6
STYLING TIPS	Page 7
CLEANING & MAINTENANCE	Page 8
TROUBLESHOOTING	Page 8
WIRING	Page 9
GUARANTEE	Page 11

Travel Hairdryer Instructions

Please retain this leaflet for future reference.

IMPORTANT SAFEGUARDS


When using this electrical appliance, especially when children are present, basic safety precautions should always be observed including the following.


TO REDUCE THE RISK OF FIRE AND INJURY


1. This appliance can be used by children from aged 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. Keep the appliance and its cord out of reach of children less than 8 years old.
2. Switch off the appliance and unplug from outlet when not in use, before putting on or taking off attachments and also before cleaning the appliance.

3. Never use your appliance without paying attention! Always unplug the unit when not in use or left unattended.
4. Do not operate the appliance with a broken cord or plug, or if the appliance malfunctions, or is dropped or damaged in anyway.
5. Do not wrap the cord around the appliance.
6. Do not obstruct the inlet or outlet grills.
7. Any servicing or repair must be performed by an authorised service representative.
8. Do not use outdoors or in damp areas.
9. Do not let the cord hang over the edge of the work surface or let it touch any hot surfaces.
10. The use of attachments that are not supplied by the manufacturer may cause fire, electric shock or injury and damage to the appliance.
11. To protect against risk of electrical shock, never immerse the unit or let it come into contact with water or any other liquids. Do not use the unit with wet hands. If the appliance should become wet, damp or fall in water, remove plug from mains socket immediately. Do not put your hands in the water. Do not take into bathroom.
12. Never carry the unit by its power cord.

13. Do not drop or insert any object into any opening.
14. Care should be taken to avoid contact with the skin, the face and neck.
15. Do not use with a voltage converter.
16. Allow the appliance to cool before storing away.
17. Use this appliance only for its intended purpose.
18. When the hairdryer is used in the bathroom, unplug it after use since the proximity of water presents a hazard even when the hairdryer is switched off.
19. For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom.
Ask your installer for advice.
(NOTE: Mains sockets might not be permitted in average sized bathrooms according to local wiring regulations).


 **WARNING:** DO NOT USE THIS APPLIANCE NEAR BATHTUBS, SHOWERS, BASINS OR OTHER VESSELS CONTAINING WATER.



 **WARNING:** YOU MUST SELECT THE CORRECT VOLTAGE BEFORE PLUGGING IN YOUR HAIRDRYER.


OPERATING INSTRUCTIONS

Please check the correct voltage requirements for the country you are travelling to as incorrect voltage will irrevocably damage the dryer. Please ensure it is switched back to high voltage if you intend to use it in the UK.

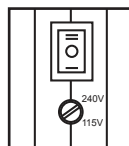

HIGH VOLTAGE (220-240V)

For use on high voltage, the dual voltage switch must be placed in the 240V position.

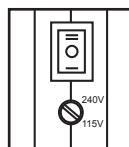

LOW VOLTAGE (110-130V)

For use on low voltage, the dual voltage switch must be placed in the 115V position.

HEAT SETTINGS

The Wahl Travel Hairdryer has 2 temperature settings, 2 speed settings.

- High heat high speed
- Low heat low speed

5

The barrel of your hairdryer can be folded against the handle for travel purposes.

STYLING TIPS

After washing :
Gently towel dry hair to remove excess water.
Make use of the variable heat settings at different stages of the styling to achieve maximum results.
Do not concentrate airflow on any one area for an extended period of time.

CONCENTRATOR NOZZLE

Attach the concentrator nozzle onto the barrel of your hairdryer for directional blow drying, ideal for applying direct heat to concentrated areas.

DIFFUSER

When using a diffuser, the hairdryer should be used on low heat settings. Do not use at high temperatures as overheating can cause damage to both the hairdryer and diffuser. Attach the diffuser onto the barrel of your hairdryer and move through the hair for volume.

REPAIRS

Do not attempt to repair this appliance yourself. Repairs can only be made by qualified service personnel with special tools. Repairs by under qualified persons will invalidate the guarantee, and may result in accident or injury. If the hairdryer fails to work properly when purchased, return it to the retailer from which it was purchased.

6

CLEANING AND MAINTENANCE

1. Always unplug the hairdryer before cleaning.
2. Do not immerse in water.
3. Use a slightly damp cloth to clean the body of the hairdryer, and dry with a clean cloth.
4. Store the appliance in a drawer or hang up away from dust and moisture.
5. The hairdryer is fitted with a detachable filter cover which may be removed for cleaning. To remove the filter cover, twist it anti-clockwise. Use a small brush to remove dust and hair from the filter screen (wash in warm soapy water if necessary). Ensure the filter cover is completely dry before fitting back onto the hairdryer. To refit the filter cover, align in place and twist clockwise to lock into position.

It is recommended that this filter is removed regularly for cleaning, and thereby allowing air to flow freely through the motor and fan unit.

TROUBLESHOOTING

Problem	Possible Cause	Solution / Hint
Smoke comes out of the hair or from the appliance during use.	You have put products on your hair (for example, mousse, spray or gel).	This is normal if you use products to style. Never put any product in your hair that is not suitable for use with high temperature appliances. Do not use gel or wax. Use only styling products specifically designed for this purpose.
	The switch is not on the correct voltage.	For use in the United Kingdom the dual voltage switch must be placed in the 240V position. For use internationally the dual voltage switch may need to be changed. Check the voltage for the country before you plug in the dryer (see page 6 for further details).

7

8

Problem	Possible Cause	Solution / Hint
The appliance does not switch on.	The appliance is not switched on.	Press either the 1st heat/speed setting or the 2nd heat/speed setting to switch on the appliance.
	The plug is not fitted correctly into wall socket.	Fit the plug correctly into wall socket.
	The wall socket is damaged.	Connect the appliance to a wall socket that works properly.
	The supply cord may be damaged.	The supply cord must be replaced by an authorised technical assistance service or by qualified technicians in order to avoid any hazards.
	The switch is not on the correct voltage.	For use in the United Kingdom the dual voltage switch must be placed in the 240V position. For use internationally the dual voltage switch may need to be changed. Check the voltage for the country before you plug in the dryer (see page 6 for further details).

WIRING

WARNING: PLEASE CHECK THE POWER CORD REGULARLY FOR DAMAGE. IF THE SUPPLY CORD IS DAMAGED IT MUST BE REPLACED BY THE MANUFACTURERS SERVICE AGENT OR A SIMILARLY QUALIFIED PERSON IN ORDER TO AVOID A HAZARD.

9

GUARANTEE

This product is guaranteed against defects in material and workmanship for a period of one year from the date of original purchase or receipt as a gift.

Should this product become defective during the guarantee period, return it to the store of purchase together with your proof of purchase for repair or replacement.

Alternatively within the guarantee period you can return the product to Wahl (UK) Ltd who will repair any such defect or elect to replace the product or any part of it, without charge, provided there is proof of purchase. Should a replacement be offered this will not extend the original guarantee period.

The guarantee becomes invalid in the case of misuse, alteration or repair by unauthorised persons.

This guarantee in no way affects your rights under law in the United Kingdom.

The wires in the mains lead of this hairdryer are coloured in accordance to the following code:

Blue Neutral (N) Brown live (L)

This appliance is fitted with a 3 pin plug which has a 13amp fuse fitted.

If the plug supplied is not suitable for your socket or becomes damaged, it should be cut off and disposed of, and a suitable plug fitted as detailed below.

As the colours of the wires in the mains lead of this hairdryer may not correspond with the colour markings identifying the terminals in your plug, proceed as follows.

The wire which is coloured BLUE must be connected to the terminal in the plug which is marked with the letter 'N' or coloured BLACK or BLUE.

The wire which is coloured BROWN must be connected to the terminal in the plug which is marked with the letter 'L' or coloured RED or BROWN.

DO NOT connect either wire to the terminal in the plug which is marked with the letter 'E' or has the Earth symbol, or coloured GREEN or GREEN/YELLOW.

WASTE ELECTRICAL & ELECTRONIC EQUIPMENT DIRECTIVE 2002/96/EC (WEEE)



At the end of this products life it should not be disposed of with general household waste. Care should be taken to dispose of in a suitable manner in accordance with your Local Authority regulation.

10

WAHL (UK) LTD
STERLING HOUSE
CLIPPER CLOSE
RAMSGATE
KENT, CT12 5GG
www.wahl.co.uk

CUSTOMER SERVICE T: 01227 740066

Form No. ZB734
Rev2 06-18