

# PG-9076说明书 80g米黄色特种纸,双面折页 尺寸: 630x142mm

## ipega® 蝙蝠侠 3in1 蓝牙手柄


产品说明书(PG-9076)中文版

### 适用说明:

- 非常感谢您购买ipega公司开生产的蝙蝠侠3in1 蓝牙手柄;
- 本产品主要适用于在Android/iOS/Win 7/8/10系统蓝牙连接和PS3游戏主机无线连接时,进行游戏操作时使用!
- 适用设备:智能手机/平板电脑/智能电视、机顶盒/PC电脑/PS3游戏主机;
- L/RT为模拟量功能,更加注重体验的细节,使游戏精准可控!
- 带Turbo加速功能,在游戏操作时功能更加强大,快捷!
- 在鼠标模式下,带多媒体功能:音量+/音量-播放/暂停/上一曲/下一曲;

\*因官方游戏平台软件升级或源代码变更等不可抗拒的因素造成部分游戏无法与本产品连接操作,我公司不承担任何责任,对此我公司保留最终解释权。

售后客服QQ群: 344494518  
客服电话: 400-806-3006  
在线时间: 周一至周五9:30-17:30



### 功能按键图示:



USB接口  
LB/LT键  
Turbo加速键  
START键  
十字方向键  
SELECT键  
左3D及下压L3键  
模式及充电指示灯  
RB/RT键  
iOS NEW键  
ICADE键  
ABXY功能键  
ANDROID键  
右3D及下压R3键  
HOME键  
(长按开/关机)

### 安卓设备使用说明:



- 同时按住**Android+**和**键**2秒,此时四个LED指示灯同时快闪;如图1
- 将安卓设备端的蓝牙功能打开,点击“扫描”如图2
- 当搜索到蓝牙名为“PG-9076”的设备名时,选择配对连接;如图2
- 连接成功,LED1指示灯常亮!如图3
- 手机扫描二维码下载游戏平台,进入平台下载所需要的游戏。



### iOS游戏大厅模式



支持iOS非越狱设备,支持第三方游戏平台,此模式仅限中国大陆地区使用

- 同时按住**NEW键**和**键**2秒,此时四个LED指示灯同时快闪;如图1
- 将iOS设备端的蓝牙功能打开,当搜索到蓝牙名为“Newgamepad N1”的设备名时,选择配对连接;如图2
- 连接成功,LED3指示灯常亮;如图3
- 支持iOS设备9.3.0以上系统;
- 手机扫描二维码下载游戏平台,进入平台下载所需要的游戏。

### iOS按键映射功能:

- 支持iOS第三方游戏平台,如需要更改按键功能,在游戏厅内操作手柄即可更改;
- 方格游戏大厅映射方法:按下手柄的“NEW”键调出映射菜单;进入游戏大厅映射方法:同时按下“START+SELECT”组合键调出映射菜单(如图);
- 将需要映射的按键,拖到相应的触摸功能键上与之重叠叠层后即可操作游戏!
- 部分原生支持手柄的游戏不能调用映射菜单。



### PC有线连接操作方法:



- 按住手柄**START**键使用包装自带的USB数据线直接与电脑USB接口连接。此时进入USB有线模式状态。
- PS3模式连接OK后,LED2指示灯常亮;此时为PS3模式。
- 需要长按**键**三秒切换为360模式,此时LED3指示灯常亮。

### PC设备蓝牙连接操作方法:

- (带蓝牙功能的电脑请直接跳至第2.2步)在手柄关机状态下,同时按住手柄的**Android键**与**键**搜索蓝牙设备,此时LED1-LED4指示灯同时快闪;
- 将蓝牙4.0接收器插入PC设备的USB接口,Windows系统会自动安装驱动程序;
- 驱动程序安装成功后,会在电脑的右下角显示蓝牙设备的符号;如下图1;
- 将鼠标移动到蓝牙符号处,单击鼠标右键,选择“添加设备”;如下图2;
- 选择“添加设备”后,会在对话框内搜索到设备的型号(PG-9076)图标;如下图3;
- 点击“下一步”,并选择“不使用代码进行配对”,确认后则会自动添加,提示蓝牙连接成功!连接OK后,LED1指示灯常亮!如下图4;
- 蓝牙连接成功后为360鼠标模式,支持以鼠标方式运行的游戏!



### PC设备/智能电视/电视盒子/PS3主机 2.4G无线连接操作方法:

- 将2.4G无线接收器插入PC设备/智能电视/电视盒子的USB接口内;
- 同时按住**+SELECT**键后,手柄进入无线配对模式,此时LED1-LED4指示灯同时快闪;
- 蓝牙连接OK后,LED2指示灯常亮;
- 可以开始操作PC设备/智能电视/电视盒子下载安装的游戏!



### PS3游戏主机 无线连接操作方法:



- 将2.4G无线接收器插入PS3主机的USB接口内;
- 同时按住**+SELECT**键后,手柄进入无线配对模式,此时LED1快闪,连接成功后LED1长亮;
- 连接OK后,就可以开始操作PS3主机的游戏了!

### Turbo功能:

- Turbo功能设定:先按住要加速的功能键例如:A键,再按住Turbo键,此时A键具有加速连打功能;
- Turbo功能取消:先按住已经设置加速的功能键,例如A键,再按住Turbo键,此时A键的加速连打功能就取消了!

### 鼠标/多媒体功能

- 多媒体功能:需在鼠标模式下进行操作,可控制音乐播放;
- 设备与手柄配对连接成功后,短按**键**可切换到鼠标模式;此时LED2灯亮;
- 在鼠标模式下,各按键功能如下(iOS系统设备因系统限制无线鼠标不可正常使用):  
Y键:音量+; A键:音量-; 键:上一曲; B键:下一曲; L2键:播放/暂停; L1键:鼠标左键; R2键:播放/暂停; R1键:鼠标右键;左3D:鼠标快移;右3D:鼠标慢移动;
- 如需切换回游戏模式请短按**键**。

### 手柄充电/休眠/唤醒功能:

- 手柄在关机状态下(按**键**开/关机)充电时,4个LED指示灯同时慢闪,充电后熄灭!当在蓝牙连接状态下充电时,当前模式灯慢闪,充电后长亮!
- 睡眠/唤醒功能:游戏手柄在5分钟内不使用会自动进入睡眠状态,当需要重新使用时按**键**唤醒即可回连;
- 电池电量不足时,当前模式指示灯快闪提示;



### 操作使用模式:

适用系统	Android系统	iOS系统
工作模式	安卓标准游戏模式	iOS游戏大厅模式
模式配对(长按2秒)	Android+ 键	NEW+ 键
指示灯	LED1	LED3

适用系统	Windows系统	PS3游戏主机
工作模式	2.4G无线模式	2.4G无线模式
模式配对(长按2秒)	+SELECT	PS3模式: RESTART键不放开机300毫秒; PS3模式下长按+SELECT键三秒进入
指示灯	LED2	PS3模式: LED2 360模式: LED3

### 电性参数:

1.工作电压: DC3.7V	5.充电电压/电流: DC5V/500mA
2.工作电流: 30 mA	6.蓝牙传输距离: <=8M
3.持续使用时间: 10H	7.电池容量: 380mAh
4.休眠电流: <10uA	8.待机时间: 满电放置30天

### 注意事项:

- 请不要把本产品放在潮湿或高温地方存储;
- 不要敲击、摔打、敲打、刺穿,或试图去分解本产品,以免对产品造成不必要的损害;
- 产品内置电池,请勿和垃圾一起丢弃;
- 不要在靠近火源或其它热源的地方对手柄进行充电;
- 非专业人员请勿拆卸本产品,否则不在售后维修服务内;

### 常见问答:

问: 为什么在iOS手机“App Store”里下载的游戏用手柄操控不了?  
答: 因iOS的协议限制, iOS的游戏需在游戏平台内下载游戏,平台内的游戏跟手柄适配过的,“之前已经下载的游戏要卸载,以免有冲突”。

问: 游戏时按键不受控或混乱怎么办?  
答: 将手柄关机重新连接,连接过程中请不要碰触其它按键

问: 手机蓝牙打开无法搜索到手柄?  
答: 1.取消手柄与手机之前的蓝牙配对设备名,重新开启手机蓝牙搜索配对  
2. 使用回形针按下手柄背面的复位孔

问: 新手柄为什么不开机?  
答: 1. 新手柄一般电量不足,请用包装盒内的USB线上5V充电器,给手柄充电。  
2. 充满电后再开机键开机。  
3. 如果手柄插上电源(5V)后指示灯还是不亮,请用回形针按下手柄背面的复位孔

### 配件清单:



正面

反面

## ipega® Batman Bluetooth Gamepad User Manual

Instruction Manual(PG-9076)

 
### Applicable instructions

- Thanks for purchasing iPega developed Batman 3 in 1 Bluetooth GamePad.
- This Gamepad support playing games on Bluetooth enabled tablet/ smart phone/ TV box/ smart TV/ VR, and Win7/ Win8/ Win10 PC without any drivers. Also support 2.4G wireless connection with PS3 for playing games.
- LB button and RB button have simulator function, much more focus on operating details, make games controlled exactly.
- Support TURBO(acceleration) function, make it stronger and faster when playing games.
- Multimedia player buttons “volume +”, “-”, “next”, “Play / Pause” can be used under Mouse Mode.

\* Due to the official game platform software upgrades or source code changes and other non-resist factors caused some of the game can not be played or connected with our Gamepad, iPega company has no responsibility. iPega reserve the right of final interpretation for this.

 

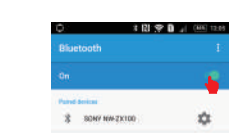 

\* **iOS devices (iPhone/iPad) has authorization limited, so currently for Chinese user only.**

### Introduction for key functions:

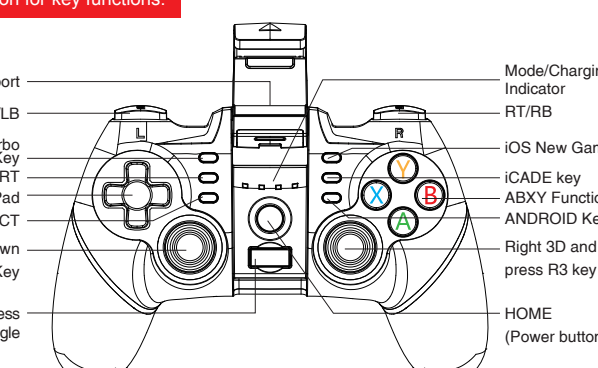

Micro USB port  
LT/LB  
Turbo Acceleration Key  
START  
D-Pad  
SELECT  
Left 3D and Down  
Press L3 Key  
2.4G Wireless dongle  
Mode/Charging Indicator  
RT/RB  
iOS New Game Key  
ICADE key  
ABXY Function Key  
ANDROID Key  
Right 3D and down  
press R3 key  
HOME  
(Power button)

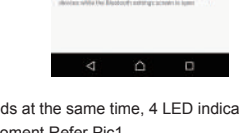

### Usage of Android device



- Press and hold **Android** button + **键** for 2 seconds at the same time, 4 LED indicator lights will blink simultaneously in a rapid manner at this moment. Refer Pic1
- Open the Bluetooth on Android device, click searching, find and select “PG-9076” for Bluetooth pairing. Refer Pic2
- LED1 lit on after Bluetooth connected. Refer Pic3
- Then you are ready for playing games on Android devices.

### Important notice for games capability in this mode:

- Download simulator games from the third party Games App. Scan the QR code or input www.xiaoj001.com to your phone browser to download the Android Game Center App, there has vast of most popular available games supportable.
- Download gamepad enabled games (similar console games as below) from Google Playstore which you can play directly. You can map button in the game settings for some of the game, such as ShadowGun, Recommend console game list: Implosion / Dead Trigger / Dead Effect / CS Portable / The dungeon hunter 4 glory palace / Shadowgun: DeadZone / SoulCraft - Action RPG
- If you want play some of the online games such as PUBG, Mobile legends, Rules of survival etc which downloaded from Google Playstore, then you need download the Octopus driver for buttons mapping, check the operation guide video on PEGA HK Youtube.



Scan to download Android Game Center:  
www.xiao-j001.com  
Octopus Driver:  
http://www.phoenixos.com/octopus/intro

### How to use USB data cable connect to PC for gaming :

 
- Hold on the START key on gamepad and connect gamepad to the computer's USB port via the USB cable. At this point entered the USB wired mode.
- After the wired mode connected, the LED2 indicator is on. In this case, it is the PS3 mode, you can play games on Sony PS3.
- Press the **键** for three seconds to switch to x-input mode and playing of 360 games on PC. The LED3 indicator lights up once successful connected.

### Bluetooth connection to PC:

- With the gamepad off, press and hold gamepad button **Android** + **键** simultaneously for searching the Bluetooth device, and the LED1-LED4 flash quickly. (If your PC has Bluetooth function, please go to step2.2)
- Insert the Bluetooth 4.0 Dongle into the USB interface on PC device; The driver will be installed by Windows system automatically;
- After the driver is installed successfully, the symbol of the Bluetooth device will be displayed in the lower right corner of the computer;
- Move the mouse to the Bluetooth symbol, click the right mouse button, and search “Add device”;
- After selecting “Add device”, the device model (PG-9076) icon can be selected;
- Click “next”, and select “Do not use the code to match”, it will be automatically added after confirmed., remind the Bluetooth was connected! After connected, the indicator light is always on;
- It will be D\_INPUT mode after the Bluetooth is connected successfully and can support the games running in simulator way.

 
 

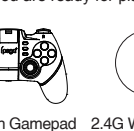 
### Turbo Function:

- Enabling of Turbo Function: First, press the key that needs the turbo function, for example, the A key and then, press the Turbo key. At this moment, the A key will be enabled with the turbo function.
- Disabling of Turbo Function: First, press the key that has been set up with the turbo function, for example, the A key and then, press the Turbo key. At this moment, the turbo function in A key will be disabled.

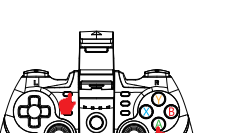

### 2.4G wireless connect to PS3/Windows PC/Android Smart TV and TV box:

- Plug 2.4G Wireless dongle into the USB port of your PS3, Windows PC, Android Smart TV or TV box.
- Press and hold **+SELECT** button, All LEDs will flash quickly at this moment means gamepad entered wireless matching mode.
- LED2 will light on once successfully connected.
- Then you are ready for playing games.

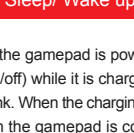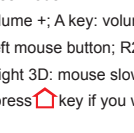 


### Mouse & Multimedia Function

- Multimedia player function, need to operate in mouse mode;
- After successful connection in HID mode, you can switch to mouse mode by short press **键**; LED2 lights up at this time;
- In mouse mode:  
Y key: volume +; A key: volume -; X key: previous song; B key: next song; L2 key: play/pause;  
L1 key: left mouse button; R2 key: play/pause; R1 key: Right mouse button; left 3D: mouse fast moving; right 3D: mouse slow moving.  
4. Short press **键** if you want switch back to HID made from mouse mode.

### Charge/ Sleep/ Wake up function of Gamepad:

- When the gamepad is power off (Press **键** button to power on/off) while it is charging, 4 LED indicator lights will slowly blink. When the charging is completed, the lights will be off! When the gamepad is connected to other device via Bluetooth while it is charging, the current mode light will slowly blink. When the charging is completed, the light will be on.
- Sleep/Wake-Up Function: The game pad cannot be used within 10 minutes and it will enter into the sleep status. When you need to use it again, press the **键** key and it will automatically return to wake-up status.
- When the battery power is low, the current mode indicator light will blink rapidly.

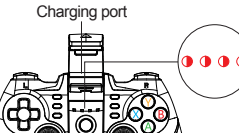

### Operation instructions:

	Android system	Mouse Mode
Working mode	Android general mode (HID Gamepad Mode)	Mouse Mode
Bluetooth pairing buttons (Press and hold on 2's)	Android+ button	In HID mode, press the button to shift
Indicator	LED1	LED2
Remark	Press button to swift to mouse mode from Android general mode	

	Playstation 3	Windows system
Working mode	2.4G wireless mode	Connect by USB data Cable mode
Bluetooth pairing buttons (Press and hold on 2's)	+ SELECT button	PS3 mode: LED2 X-input mode: LED3
Indicator	LED1	LED2
Remark	Need to use 2.4 wireless Dongle	Need USB cable

### Electrical Parameters:

1.Working voltage: DC3.7V	5.Charging voltage/current: DC5V/500mA
2.Working current: 30 mA	6.Bluetooth transmission distance: <=8M
3.Consecutive Usage Hours: 10H	7.Battery capacity: 380mAh
4.Sleep mode current: <10uA	8.Standby time: up to 30days once fully charged

### Notes:

- Please do not store this product in wet or high-temperature areas.
- Don't knock, beat, drop, pierce, or try to decompose this product, to avoid unnecessary damage to the product.
- The product has built-in batteries, and please don't discard them together with the garbage.
- Don't charge the controller in a place near the fire or other heat source.
- Non-professional personnel should not disassemble the product, otherwise it will not be covered in the after-sales warranty service.

 
### Frequency asked question to operate this Gamepad

Q1: I opened Bluetooth searching, but still can't pair it with my device?  
A2: Please turn off and ignore the previous connected device. Then reopen Bluetooth for connect. If you still can't connect, then please use the needle press the RESET button on the back of Gamepad for 5 seconds. Then reconnect the Bluetooth.

Q2: I can't turn on the Gamepad.  
A3: Please recharge the Gamepad before you use it at the first time or use it again after a long period. Please check the charge indicator light turn on while charging and will turn off once fully charged. If the Charge indicator do not light on while charge cable connected to the power source, then please try to change a charge cable or use the needle press the RESET button on the back of Gamepad for 5 seconds.

Q3: Joystick moving itself or other buttons works improper when entered the game.  
A4: Please use the needle press the RESET button on the back of Gamepad for 5 seconds. Please be reminded don't touch wrong buttons while Bluetooth pairing.

### Accessories List:

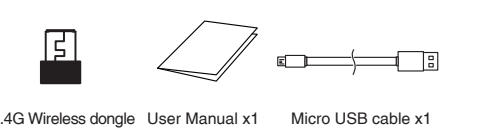

iPega and ePega trademarks all belong to PEGA LIMITED.