

## Package Contents

- CK350 Gaming Keyboard
- Quick Start Guide



部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr (VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
结构壳体	X	○	○	○	○	○
开关组件 PCB_USB	X	○	○	○	○	○
线材	X	○	○	○	○	○
螺丝	X	○	○	○	○	○

○ 表示该有害物质在该部件所有均质材料中的含量均在SJ/T11363-2006标准规定的限量要求以下。  
 X 表示该有害物质至少在该部件的某一均质材料中的含量超出SJ/T11363-2006标准规定的限量要求。  
 注：本产品中的塑料件均符合RoHS指令的要求，且含有有害物质元素的部件均通过全球技术及环保标准测试，符合RoHS指令的要求。

**Asia Pacific - Cooler Master Technology Inc.**  
 8F., No. 788-1, Zhongzheng Rd., Zhonghe Dist.,  
 New Taipei City 23586, Taiwan (R.O.C.)  
 Jinshan Dist., Shanghai City, China  
 Tel: +886-2-2225-3517

**North America - Cooler Master North America**  
 2929 East Imperial Highway, suite 110  
 Brea, CA 92821, USA  
 Tel: +1-888-624-5099

**China - Cooler Master China**  
 Room 2062, Floor 6, No. 421, Weiqing Rd.,  
 Jinshan Dist., Shanghai City, China  
 Tel: +86-21-51872177

**Europe - Cooler Master Europe B.V.**  
 Lodewijkstraat 1b, 5652AC Eindhoven,  
 The Netherlands  
 Tel: +31-(0)40-702-0900

© 2018 Cooler Master Technology Inc. All Rights Reserved.  
 All trademarks are registered to their respective owners.



Ver 1.0; 2018/07

## Cooler Master Products

### LIMITED WARRANTY

This document describes the warranty terms for all Cooler Master peripheral products

#### WHO THE WARRANTY PROTECTS:

This Warranty is valid to the original purchaser only.

#### WHAT THE WARRANTY PROTECTS:

This warranty is valid only for the Cooler Master Products distributed by authorized dealer(s).

Please contact Cooler Master for warranty information, services and questions:  
<http://account.coolermaster.com>

#### WHAT IS AND IS NOT COVERED

It is important to note that our warranty is not an unconditional guarantee for the duration of the Program.

Any replaced parts become the property of Cooler Master. The Program does not apply to the software component of a product or a product which has been damaged due to accident, misuse, abuse, improper installation, usage not in accordance with product specifications and instructions, natural or personal disaster, or unauthorized alterations, repairs or modifications.

The Program does also not cover any events such as below:

- Any damages unrelated to manufacturing defects.
- Any unsuitable environment or use of the product in Cooler Master Opinion.
- Any product which has been modified without official permission from Cooler Master, or on which the serial number or warranty sticker has been defaced, modified, or removed.

Damage, deterioration or malfunction resulting from:

- Accident, abuse, misuse, neglect, fire, water, lightning, or other acts of nature, commercial or industrial use, unauthorized product modification or failure to follow instructions included with the product.
- Third party products using Cooler Master Components will not be covered by warranty. See your vendor or the manufacturer for information about servicing.
- Repair or attempted repair by anyone not authorized by Cooler Master, Inc.
- Any shipment damages (claims must be made with the carrier).
- Unauthorized repairs to a Cooler Master product will void the warranty offered by the Program.

Cooler Master reserves the right to refuse to service any product which has been altered, modified or repaired by non-Cooler Master Service personnel.

• You are responsible for the cost of shipping the product to Cooler Master. Cooler Master pays the cost of returning a product to You (applies only if product is directly purchased from Cooler Master).

• Cooler Master reserves the right to replace the product with a service product at their sole discretion at any time.

• Product malfunction or damage resulting from liquids or moisture.

• All accessories that malfunction due to physical damage such as: USB cables, extension cables, adapter cables, adapters, power cords, screws, retention brackets, ear cups, and all other similar accessories.

• Cooler Master does not warrant that this product will meet your requirements. It is your responsibility to determine the suitability of this product for your purpose.

• Removal or installation charges.

• You are responsible for the cost of shipping the product to Cooler Master. Cooler Master pays the cost of returning a product to You (applies only if product is directly purchased from Cooler Master).

• Cooler Master reserves the right to replace the product with a service product at their sole discretion at any time.

• Product malfunction or damage resulting from liquids or moisture.

• All accessories that malfunction due to physical damage such as: USB cables, extension cables, adapter cables, adapters, power cords, screws, retention brackets, ear cups, and all other similar accessories.

• Cooler Master does not warrant that this product will meet your requirements. It is your responsibility to determine the suitability of this product for your purpose.

• Removal or installation charges.

• You are responsible for the cost of shipping the product to Cooler Master. Cooler Master pays the cost of returning a product to You (applies only if product is directly purchased from Cooler Master).

• Cooler Master reserves the right to replace the product with a service product at their sole discretion at any time.

• Product malfunction or damage resulting from liquids or moisture.

• All accessories that malfunction due to physical damage such as: USB cables, extension cables, adapter cables, adapters, power cords, screws, retention brackets, ear cups, and all other similar accessories.

• Cooler Master does not warrant that this product will meet your requirements. It is your responsibility to determine the suitability of this product for your purpose.

• Removal or installation charges.

• You are responsible for the cost of shipping the product to Cooler Master. Cooler Master pays the cost of returning a product to You (applies only if product is directly purchased from Cooler Master).

• Cooler Master reserves the right to replace the product with a service product at their sole discretion at any time.

• Product malfunction or damage resulting from liquids or moisture.

• All accessories that malfunction due to physical damage such as: USB cables, extension cables, adapter cables, adapters, power cords, screws, retention brackets, ear cups, and all other similar accessories.

• Cooler Master does not warrant that this product will meet your requirements. It is your responsibility to determine the suitability of this product for your purpose.

• Removal or installation charges.

• You are responsible for the cost of shipping the product to Cooler Master. Cooler Master pays the cost of returning a product to You (applies only if product is directly purchased from Cooler Master).

• Cooler Master reserves the right to replace the product with a service product at their sole discretion at any time.

## EXCLUSION OF DAMAGES

COOLER MASTER'S LIABILITY IS LIMITED TO THE COST OF REPAIR OR REPLACEMENT OF THE PRODUCT. COOLER MASTER SHALL NOT BE LIABLE FOR:

- DAMAGE TO OTHER PROPERTY CAUSED BY ANY DEFECT IN THE PRODUCT, DAMAGES BASED UPON INCONVENIENCE, LOSS OF USE OF THE PRODUCT, LOSS OF TIME, LOSS OF PROFITS, LOSS OF BUSINESS OPPORTUNITY, LOSS OF GOODWILL, INTERFERENCE WITH BUSINESS RELATIONSHIPS OR OTHER COMMERCIAL LOSS, EVEN IF ADVISED OF THEIR POSSIBILITY OF SUCH DAMAGES.
- ANY OTHER DAMAGES, WHETHER INCIDENTAL, CONSEQUENTIAL OR OTHERWISE
- ANY CLAIM AGAINST THE CUSTOMER BY ANY OTHER PARTY

#### WARRANTY INFORMATION:

If the product is found with reasonable defect within the period of (refer to Table A.) starting on the first day of purchase (with proof of invoice), this is what you must do, to claim warranty.

#### PROCEDURES:

1. Consumers should return to the shop where he/she has bought the goods. After confirming with the shop with a valid invoice, they may approach the distributor for RMA claim.

2. After confirmed by the distributor that the goods was damaged due to natural causes, replacement and repair will be done by distributor (including brand new or refurbished goods)

3. All faulty goods must return to the distributor, expenses for returning the faulty goods will be covered by the consumer, and distributor will cover the cost involved in the transporting of parts or repaired goods to the consumer.

Regarding all the expenses incurred in making the claim, and this is how you would claim:

1. Within the valid warranty date, starting from the first day of issuing invoice, Retail shops will assist in confirmation with distributor for the consumer for the following.

A. If the damage was caused by the consumer, then the consumer should cover all expenses in fixing the product, if the product still can't be fixed, we would suggest consumer in buying a brand new product.

B. Product defect caused under natural use, expenses will be covered by the distributor.

2. Faulty products with expired warranty dates, we would suggest consumer to purchase a new products, without undergoing for repairs.

**Table A:**

Cooler Master Products

Please check your user manual for the exact warranty period terms for products that are not shown below.

For more warranty information, please visit our official website:

<http://www.coolermaster.com/service/warranty.html>

**Cooler Master Gaming Peripherals products warranty**

Product Name	Warranty Term
CK350	2 years

**FOR AUSTRALIA ONLY:**

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. (Cooler Master Technology Inc., 8F., No. 788-1, Zhongzheng Rd., Zhonghe Dist., New Taipei City 23586, Taiwan (R.O.C.))

Telephone: +886-2-2225-3517 (standard international call charges apply).



# Make It Yours.



# CK350

## RGB Mechanical Gaming Keyboard

## EN



FN + ESC = Reset to default (Press and hold ~5 sec)



FN + F1 = LED Gaming Lighting Mode 1

FN + F2 = LED Gaming Lighting Mode 2

FN + F3 = LED Gaming Lighting Mode 3

FN + F4 = LED Gaming Lighting Mode 4



FN + F5 = Volume up

FN + F6 = Volume down

FN + F7 = Mute

FN + F8 = Play/pause



FN + F9 = Email

FN + F10 = Browser

FN + F11 = My Computer

FN + F12 = Calculator



FN + INS = Cycle LED Lighting Mode

FN + DEL = Change (Extra) LED Mode



FN + HOME = Record Custom Light Mode

FN + END = Save Custom Light Mode



FN + PGUP = Speed up LED Lighting Effect (4 levels)

FN + PGDN = Speed down LED Lighting Effect (4 levels)



FN + Up Arrow key = LED Lighting Brightness Up (5 levels)

FN + Down Arrow key = LED Lighting Brightness Down (5 levels)

FN + Left / Right Arrow keys =

LED Lighting Color Change / Quick Pick 7 LED Lighting Colors



FN + Left Windows Key = Windows Lock Toggle

MAKE YOUR GAMING EXPERIENCE.

## ES

FN + ESC = Restaurar valores predeterminados (Mantener presionado durante aproximadamente 5 segundos)

FN + F1 = Modo 1 de iluminación LED para juegos
FN + F2 = Modo 2 de iluminación LED para juegos
FN + F3 = Modo 3 de iluminación LED para juegos
FN + F4 = Modo 4 de iluminación LED para juegos

FN + F5 = Subir volumen
FN + F6 = Bajar volumen
FN + F7 = Silenciar
FN + F8 = Reproducir/Pausar

FN + F9 = Correo electrónico
FN + F10 = Explorador
FN + F11 = Mi equipo
FN + F12 = Calculadora

## DE

FN + ESC = Auf Standard rücksetzen (Etwa 5 Sekunden gedrückt halten)

FN + F1 = LED-Gaming-Beleuchtungsmodus 1
FN + F2 = LED-Gaming-Beleuchtungsmodus 2
FN + F3 = LED-Gaming-Beleuchtungsmodus 3
FN + F4 = LED-Gaming-Beleuchtungsmodus 4

FN + F5 = Lauter
FN + F6 = Leiser
FN + F7 = Stumm
FN + F8 = Wiedergabe/Pause

FN + F9 = Email
FN + F10 = Browser
FN + F11 = Mein Computer
FN + F12 = Rechner

FN + Teda de dirección arriba = Luminosité d'éclairage LED + (5 niveaux)
FN + Teda de dirección abajo = Luminosité d'éclairage LED - (5 niveaux)
FN + Teda flecha hacia la Izquierda / Derecha = Cambio de color de iluminación LED/Selección rápida de 7 colores de iluminación LED

FN + Left Windows Key = Alternar bloqueo de tecla de Windows
FN + F5 = Volume +
FN + F6 = Volume -
FN + F7 = Muet
FN + F8 = Lecture/Pause

FN + F9 = Email
FN + F10 = Navigateur
FN + F11 = Mon ordinateur
FN + F12 = Calculatrice

FN + HOME = Grabar Modo de iluminación personalizado
FN + END = Guardar Modo de iluminación personalizado

1. En cualquier Modo de Perfil (FN + F1-F4), pulse FN + INICIO para empezar a grabar un modo de iluminación personalizado

2. Pulse la tecla que desee personalizar con el color que prefiera (pulse para un ciclo de 6 colores)

3. Pulse FN + FIN para finalizar y guardar la grabación

Nota: El indicador LED de NÚM/MAYÚS/SCR parpadeará durante toda la grabación

1. Dans n'importe quel mode de profil (FN + F1-F4), appuyez sur FN + ACCUEIL pour commencer l'enregistrement d'un mode d'éclairage personnalisé

2. Appuyez sur la touche que vous souhaitez personnaliser à la couleur de votre choix (appuyez pour faire défiler les 6 couleurs)

3. Appuyez sur FN + FIN pour terminer et sauvegarder l'enregistrement.

Remarque : L'indicateur LED NUM/MAJ/ÉCR continue de clignoter pendant l'enregistrement

## FR

FN + ESC = Réinitialiser aux valeurs par défaut (Appuyer et maintenir enfoncé pendant ~ 5 secondes)

FN + F1 = Mode d'éclairage de jeu LED 1
FN + F2 = Mode d'éclairage de jeu LED 2
FN + F3 = Mode d'éclairage de jeu LED 3
FN + F4 = Mode d'éclairage de jeu LED 4

FN + F5 = Volume +
FN + F6 = Volume -
FN + F7 = Muet
FN + F8 = Lecture/Pause

FN + F9 = Email
FN + F10 = Navigateur
FN + F11 = Mon ordinateur
FN + F12 = Calculatrice

FN + HOME = Enregistrer mode d'éclairage personnalisé
FN + END = Sauvegarder mode d'éclairage personnalisé

## IT

FN + ESC = Ripristina predefiniti (Tenere premuto per ~5 sec.)

FN + F1 = Modalità illuminazione gioco LED 1
FN + F2 = Modalità illuminazione gioco LED 2
FN + F3 = Modalità illuminazione gioco LED 3
FN + F4 = Modalità illuminazione gioco LED 4

FN + F5 = Volume su
FN + F6 = Volume giù
FN + F7 = Disattiva audio
FN + F8 = Riproduzione/Pausa

FN + F9 = E-mail
FN + F10 = Browser
FN + F11 = Risorse del computer
FN + F12 = Calcolatrice

FN + PGUP = Accelerar o efeito de iluminação LED (4 níveis)
FN + PGDN = Ralentir effet lumineux LED (4 niveaux)

FN + INS = Faire défiler mode d'éclairage LED
FN + DEL = Changer mode LED (supplémentaire)

FN + HOME = Enregistrer mode d'éclairage personnalisé
FN + END = Sauvegarder mode d'éclairage personnalisé

1. Em qualquer modo de perfil (FN + F1-F4), prima FN + HOME para começar a gravar um modo de luz personalizado

2. Prima a tecla que quer personalizar com a cor desejada (prima para alternar entre 6 cores)

3. Prima FN + END para terminar e guardar a gravação.

Nota: O indicador LED NUM/MAJ/ÉCR continue de clignoter pendant l'enregistrement

FN + PGUP = Accélerer effet lumineux LED (4 niveaux)
FN + PGDN = Ralentir effet lumineux LED (4 niveaux)

FN + HOME = カスタムライトモード登録
FN + END = カスタムライトモード保存

1. どの設定モードでも (FN + F1-F4)、カスタムライトモード登録を開始するにはFN+HOMEボタンを押す

2. キーを押して、自分好みのカラーにカスタマイズ

3. FN + ENDを押して終了、記録を保存

備考:NUM/ CAPS/SCR LEDインジケーターは登録中点減しています

附注：录制期间・NUM/CAPS/SCR指示灯LED将持续闪烁

FN + PGUP = 增加LED灯光流动速度（4段）
FN + PGDN = 减小LED灯光流动速度（4段）

FN + 方向上 = 增加LED灯光亮度（5段）
FN + 方向下 = 降低LED灯光亮度调低（5段）
FN + 向左/向右箭头键 = LED灯光色彩变更/快速挑选7种LED灯光色彩

FN + Left Windows Key = Windows锁定切换

FN + Right Windows Key = Windows解锁切换

FN + F5 = 音量增加
FN + F6 = 音量降低
FN + F7 = 静音
FN + F8 = 播放/暂停

FN + F9 = 电子邮件
FN + F10 = 浏览器
FN + F11 = 我的电脑
FN + F12 = 计算器

FN + INS = 循环LED灯光模式
FN + DEL = 变更（额外）LED模式

FN + HOME = 录制自定义灯光模式
FN + END = 储存自定义灯光模式

1.在任何设定档（FN+F1-F4）下・按FN+HOME开始录制自定义灯光模式

2.按下要自定义的按键以设定想要的色彩（可切换6种颜色）

3.按FN+END结束录制并加以储存・

附注：录制期间・NUM/CAPS/SCR指示灯LED将持续闪烁

FN + PGUP = 增加LED灯光流动速度（4段）
FN + PGDN = 减小LED灯光流动速度（4段）

FN + 方向上 = 增加LED灯光亮度（5段）
FN + 方向下 = 降低LED灯光亮度调低（5段）
FN + 向左/向右箭头键 = LED灯光色彩变更/快速挑选7种LED灯光色彩

FN + Left Windows Key = Windows锁定切换

FN + Right Windows Key = Windows解锁切换

FN + F5 = 音量增加
FN + F6 = 音量降低
FN + F7 = 静音
FN + F8 = 播放/暂停

FN + F9 = 电子邮件
FN + F10 = 浏览器
FN + F11 = 我的电脑
FN + F12 = 计算器

FN + INS = 循环LED灯光模式
FN + DEL = 变更（额外）LED模式

FN + HOME = 录制自定义灯光模式
FN + END = 储存自定义灯光模式

1.在任何设定档（FN+F1-F4）下・按FN+HOME开始录制自定义灯光模式

2.按下要自定义的按键以设定想要的色彩（可切换6种颜色）

3.按FN+END结束录制并加以储存・

附注：录制期间・NUM/CAPS/SCR指示灯LED将持续闪烁

FN + PGUP = 增加LED灯光流动速度（4段）
FN + PGDN = 减小LED灯光流动速度（4段）

FN + 方向上 = 增加LED灯光亮度（5段）
FN + 方向下 = 降低LED灯光亮度调低（5段）
FN + 向左/向右箭头键 = LED灯光色彩变更/快速挑选7种LED灯光色彩

FN + Left Windows Key = Windows锁定切换

FN + Right Windows Key = Windows解锁切换

FN + F5 = 音量增加
FN + F6 = 音量降低
FN + F7 = 静音
FN + F8 = 播放/暂停

FN + F9 = 电子邮件
FN + F10 = 浏览器
FN + F11 = 我的电脑
FN + F12 = 计算器

FN + INS = 循环LED灯光模式
FN + DEL = 变更（额外）LED模式

FN + HOME = 录制自定义灯光模式
FN + END = 储存自定义灯光模式

1.在任何设定档（FN+F1-F4）下・按FN+HOME开始录制自定义灯光模式

2.按下要自定义的按键以设定想要的色彩（可切换6种颜色）

3.按FN+END结束录制并加以储存・

附注：录制期间・NUM/CAPS/SCR指示灯LED将持续闪烁

FN + PGUP = 增加LED灯光流动速度（4段）
FN + PGDN = 减小LED灯光流动速度（4段）

FN + 方向上 = 增加LED灯光亮度（5段）
FN + 方向下 = 降低LED灯光亮度调低（5段）
FN + 向左/向右箭头键 = LED灯光色彩变更/快速挑选7种LED灯光色彩

FN + Left Windows Key = Windows锁定切换

FN + Right Windows Key = Windows解锁切换

FN + F5 = 音量增加
FN + F6 = 音量降低
FN + F7 = 静音
FN + F8 = 播放/暂停

FN + F9 = 电子邮件
FN + F10 = 浏览器
FN + F11 = 我的电脑
FN + F12 = 计算器

FN + INS = 循环LED灯光模式
FN + DEL = 变更（额外）LED模式

FN + HOME = 录制自定义灯光模式
FN + END = 储存自定义灯光模式

1.在任何设定档（FN+F1-F4）下・按FN+HOME开始录制自定义灯光模式

2.按下要自定义的按键以设定想要的色彩（可切换6种颜色）

3.按FN+END结束录制并加以储存・

附注：录制期间・NUM/CAPS/SCR指示灯LED将持续闪烁

FN + PGUP = 增加LED灯光流动速度（4段）
FN + PGDN = 减小LED灯光流动速度（4段）

FN + 方向上 = 增加LED灯光亮度（5段）
FN + 方向下 = 降低LED灯光亮度调低（5段）
FN + 向左/向右箭头键 = LED灯光色彩变更/快速挑选7种LED灯光色彩

FN + Left Windows Key = Windows锁定切换

FN + Right Windows Key = Windows解锁切换

FN + F5 = 音量增加
FN + F6 = 音量降低
FN + F7 = 静音
FN + F8 = 播放/暂停

FN + F9 = 电子邮件
FN + F10 = 浏览器
FN + F11 = 我的电脑
FN + F12 = 计算器

FN + INS = 循环LED灯光模式
FN + DEL = 变更（额外）LED模式

FN + HOME = 录制自定义灯光模式
FN + END = 储存自定义灯光模式

1.在任何设定档（FN+F1-F4）下・按FN+HOME开始录制自定义灯光模式

2.按下要自定义的按键以设定想要的色彩（可切换6种颜色）

3.按FN+END结束录制并加以储存・

附注：录制期间・NUM/CAPS/SCR指示灯LED将持续闪烁

FN + PGUP = 增加LED灯光流动速度（4段）
FN + PGDN = 减小LED灯光流动速度（4段）

FN + 方向上 = 增加LED灯光亮度（5段）
FN + 方向下 = 降低LED灯光亮度调低（5段）
FN + 向左/向右箭头键 = LED灯光色彩变更/快速挑选7种LED灯光色彩

FN + Left Windows Key = Windows锁定切换

FN + Right Windows Key = Windows解锁切换

FN + F5 = 音量增加
FN + F6 = 音量降低
FN + F7 = 静音
FN + F8 = 播放/暂停

FN + F9 = 电子邮件
FN + F10 = 浏览器
FN + F11 = 我的电脑
FN + F12 = 计算器

FN + INS = 循环LED灯光模式
FN + DEL = 变更（额外）LED模式

FN + HOME = 录制自定义灯光模式
FN + END = 储存自定义灯光模式

1.在任何设定档（FN+F1-F4）下・按FN+HOME开始录制自定义灯光模式

2.按下要自定义的按键以设定想要的色彩（可切换6种颜色）

3.按FN+END结束录制并加以储存・

附注：录制期间・NUM/CAPS/SCR指示灯LED将持续闪烁

FN + PGUP = 增加LED灯光流动速度（4段）
FN + PGDN = 减小LED灯光流动速度（4段）

FN + 方向上 = 增加LED灯光亮度（5段）
FN + 方向下 = 降低LED灯光亮度调低（5段）
FN + 向左/向右箭头键 = LED灯光色彩变更/快速挑选7种LED灯光色彩

FN + Left Windows Key = Windows锁定切换

FN + Right Windows Key = Windows解锁切换

FN + F5 = 音量增加
FN + F6 = 音量降低
FN + F7 = 静音
FN + F8 = 播放/暂停

FN + F9 = 电子邮件
FN + F10 = 浏览器
FN + F11 = 我的电脑
FN + F12 = 计算器

FN + INS = 循环LED灯光模式
FN + DEL = 变更（额外）LED模式

FN + HOME = 录制自定义灯光模式
FN + END = 储存自定义灯光模式

1.在任何设定档（FN+F1-F4）下・按FN+HOME开始录制自定义灯光模式

2.按下要自定义的按键以设定想要的色彩（可切换6种颜色）

3.按FN+END结束录制并加以储存・

附注：录制期间・NUM/CAPS/SCR指示灯LED将持续闪烁

FN + PGUP = 增加LED灯光流动速度（4段）
FN + PGDN = 减小LED灯光流动速度（4段）

FN + 方向上 = 增加LED灯光亮度（5段）
FN + 方向下 = 降低LED灯光亮度调低（5段）
FN + 向左/向右箭头键 = LED灯光色彩变更/快速挑选7种LED灯光色彩

FN + Left Windows Key = Windows锁定切换

FN + Right Windows Key = Windows解锁切换

FN + F5 = 音量增加
FN + F6 = 音量降低
FN + F7 = 静音
FN + F8 = 播放/暂停

FN + F9 = 电子邮件
FN + F10 = 浏览器
FN + F11 = 我的电脑
FN + F12 = 计算器

FN + INS = 循环LED灯光模式
FN + DEL = 变更（额外）LED模式

FN + HOME = 录制自定义灯光模式
FN + END = 储存自定义灯光模式

1.在任何设定档（FN+F1-F4）下・按FN+HOME开始录制自定义灯光模式

2.按下要自定义的按键以设定想要的色彩（可切换6种颜色）

3.按FN+END结束录制并加以储存・

附注：录制期间・NUM/CAPS/SCR指示灯LED将持续闪烁

FN + PGUP = 增加LED灯光流动速度（4段）
FN + PGDN = 减小LED灯光流动速度（4段）

FN + 方向上 = 增加LED灯光亮度（5段）
FN + 方向下 = 降低LED灯光亮度调低（5段）
FN + 向左/向右箭头键 = LED灯光色彩变更/快速挑选7种LED灯光色彩

FN + Left Windows Key = Windows锁定切换

FN + Right Windows Key = Windows解锁切换

FN + F5 = 音量增加
FN + F6 = 音量降低
FN + F7 = 静音
FN + F8 = 播放/暂停

FN + F9 = 电子邮件
FN + F10 = 浏览器
FN + F11 = 我的电脑
FN + F12 = 计算器

FN + INS = 循环LED灯光模式
FN + DEL = 变更（额外）LED模式

FN + HOME = 录制自定义灯光模式
FN + END = 储存自定义灯光模式

1.在任何设定档（FN+F1-F4）下・按FN+HOME开始录制自定义灯光模式

2.按下要自定义的按键以设定想要的色彩（可切换6种颜色）

3.按FN+END结束录制并加以储存・

附注：录制期间・NUM/CAPS/SCR指示灯LED将持续闪烁

FN + PGUP = 增加LED灯光流动速度（4段）
FN + PGDN = 减小LED灯光流动速度（4段）

FN + 方向上 = 增加LED灯光亮度（5段）
FN + 方向下 = 降低LED灯光亮度调低（5段）
FN + 向左/向右箭头键 = LED灯光色彩变更/快速挑选7种LED灯光色彩

FN + Left Windows Key = Windows锁定切换

FN + Right Windows Key = Windows解锁切换

FN + F5 = 音量增加
FN + F6 = 音量降低
FN + F7 = 静音
FN + F8 = 播放/暂停

FN + F9 = 电子邮件
FN + F10 = 浏览器
FN + F11 = 我的电脑
FN + F12 = 计算器

FN + INS = 循环LED灯光模式
FN + DEL = 变更（额外）LED模式

FN + HOME = 录制自定义灯光模式
FN + END = 储存自定义灯光模式

1.在任何设定档（FN+F1-F4）下・按FN+HOME开始录制自定义灯光模式

2.按下要自定义的按键以设定想要的色彩（可切换6种颜色）

3.按FN+END结束录制并加以储存・

附注：录制期间・NUM/CAPS/SCR指示灯LED将持续闪烁

FN + PGUP = 增加LED灯光流动速度（4段）
FN + PGDN = 减小LED灯光流动速度（4段）

FN + 方向上 = 增加LED灯光亮度（5段）
FN + 方向下 = 降低LED灯光亮度调低（5段）
FN + 向左/向右箭头键 = LED灯光色彩变更/快速挑选7种LED灯光色彩

FN + Left Windows Key = Windows锁定切换

FN + Right Windows Key = Windows解锁切换

FN + F5 = 音量增加
FN + F6 = 音量降低
FN + F7 = 静音
FN + F8 = 播放/暂停

FN + F9 = 电子邮件
FN + F10 = 浏览器
FN + F11 = 我的电脑
FN + F12 = 计算器

FN + INS = 循环LED灯光模式
FN + DEL = 变更（额外）LED模式

FN + HOME = 录制自定义灯光模式
FN + END = 储存自定义灯光模式

1.在任何设定档（FN+F1-F4）下・按FN+HOME开始录制自定义灯光模式

2.按下要自定义的按键以设定想要的色彩（可切换6种颜色）

3.按FN+END结束录制并加以储存・

附注：录制期间・NUM/CAPS/SCR指示灯LED将持续闪烁

FN + PGUP = 增加LED灯光流动速度（4段）
FN + PGDN = 减小LED灯光流动速度（4段）

FN + 方向上 = 增加LED灯光亮度（5段）
FN + 方向下 = 降低LED灯光亮度调低（5段）
FN + 向左/向右箭头键 = LED灯光色彩变更/快速挑选7种LED灯光色彩

FN + Left Windows Key = Windows锁定切换

FN + Right Windows Key = Windows解锁切换

FN + F5 = 音量增加
FN + F6 = 音量降低
FN + F7 = 静音
FN + F8 = 播放/暂停

FN + F9 = 电子邮件
FN + F10 = 浏览器
FN + F11 = 我的电脑
FN + F12 = 计算器

FN + INS = 循环LED灯光模式
FN + DEL = 变更（额外）LED模式

FN + HOME = 录制自定义灯光模式
FN + END = 储存自定义灯光模式

1.在任何设定档（FN+F1-F4）下・按FN+HOME开始录制自定义灯光模式

2.按下要自定义的按键以设定想要的色彩（可切换6种颜色）

3.按FN+END结束录制并加以储存・

附注：录制期间・NUM/CAPS/SCR指示灯LED将持续闪烁

FN + PGUP = 增加LED灯光流动速度（4段）
FN + PGDN = 减小LED灯光流动速度（4段）

FN + 方向上 = 增加LED灯光亮度（5段）
FN + 方向下 = 降低LED灯光亮度调低（5段）
FN + 向左/向右箭头键 = LED灯光色彩变更/快速挑选7种LED灯光色彩

FN + Left Windows Key = Windows锁定切换

FN + Right Windows Key = Windows解锁切换

FN + F5 = 音量增加
FN + F6 = 音量降低
FN + F7 = 静音
FN + F8 = 播放/暂停

FN + F9 = 电子邮件
FN + F10 = 浏览器
FN + F11 = 我的电脑
FN + F12 = 计算器

FN + INS = 循环LED灯光模式
FN + DEL = 变更（额外）LED模式

FN + HOME = 录制自定义灯光模式